The logo consists of a solid blue square. Inside the square, the words "Lobotomo" and "Software" are stacked vertically in a white, sans-serif font.

Lobotomo
Software

IPSecuritas 3.x

Configuration Instructions

for

Netgear FVS124G

Legal Disclaimer

Contents

Lobotomo Software (subsequently called "Author") reserves the right not to be responsible for the topicality, correctness, completeness or quality of the information provided. Liability claims regarding damage caused by the use of any information provided, including any kind of information which is incomplete or incorrect, will therefore be rejected. All offers are not-binding and without obligation. Parts of the document or the complete publication including all offers and information might be extended, changed or partly or completely deleted by the author without separate announcement.

Referrals

The author is not responsible for any contents referred to or any links to pages of the World Wide Web in this document. If any damage occurs by the use of information presented there, only the author of the respective documents or pages might be liable, not the one who has referred or linked to these documents or pages.

Copyright

The author intended not to use any copyrighted material for the publication or, if not possible, to indicate the copyright of the respective object. The copyright for any material created by the author is reserved. Any duplication or use of such diagrams, sounds or texts in other electronic or printed publications is not permitted without the author's agreement.

Legal force of this disclaimer

This disclaimer is to be regarded as part of this document. If sections or individual formulations of this text are not legal or correct, the content or validity of the other parts remain uninfluenced by this fact.

Acknowledgments


Many thanks to Ulf Schröder for providing setup information, screenshots and support for writing this document.

Table of contents

Introduction	I
Netgear FVS124G Wizard Setup	I
Start VPN Wizard.....	I
Enter Name and Preshared Key	I
Finish the Wizard.....	2
IPSecuritas Setup	2
Start Wizard.....	2
Enter Name of New Connection.....	2
Select Router Model	3
Enter Router's Public IP Address.....	3
Enter a Virtual IP Address.....	3
Enter Remote Network.....	4
Enter Local Identification.....	4
Enter Remote Identification.....	4
Enter Preshared Key	5
Diagnosis	5
Reachability Test	5

Introduction


This document describes the steps necessary to establish a protected VPN connection between a Mac client and a Netgear FVS124G router/firewall. All information in this document is based on the following assumed network.

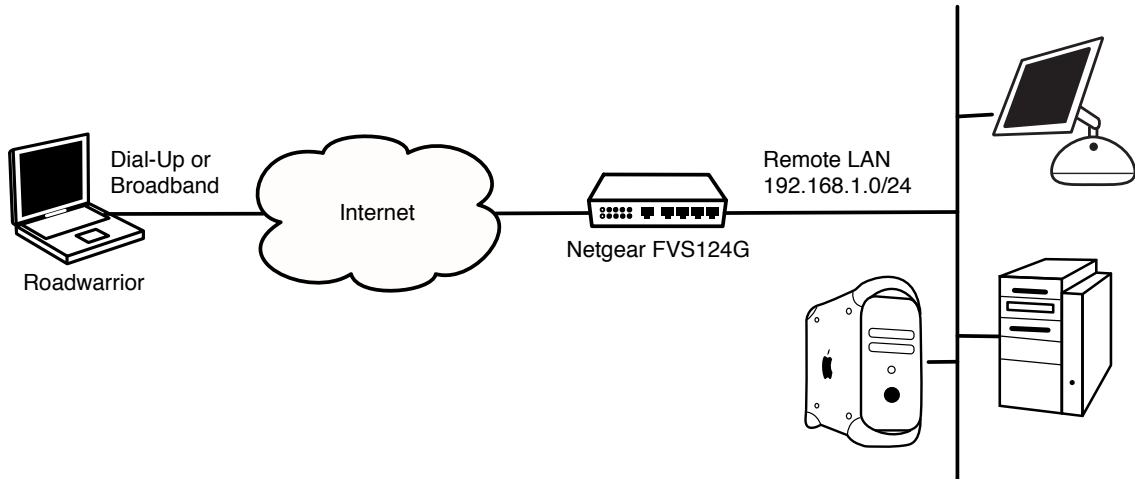

Netgear FVS124G Wizard Setup

This section describes the necessary steps to setup the FVS124G to accept incoming connections.

Start VPN Wizard

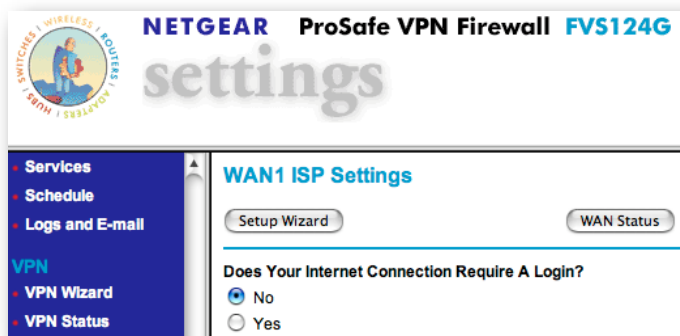

Open a web browser and connect to your Netgear router. Enter the administrator's user name (usually admin) and password. On the left side, select **VPN Wizard**. Click on the **Next** button.

Enter Name and Preshared Key


The screenshot shows the Netgear VPN Wizard Step 1 of 3: Connection Name and Remote IP Type. The form fields are: Connection Name: roadwarrior, Pre-shared key: %6dhs7Az2. The connection type is 'A remote VPN client' and the WAN interface is 'WAN 1'.

Enter a name (any arbitrary name) and the preshared key. The preshared key is used to encrypt the messages in the connection negotiations. Please choose a safe key (don't use the example on the left).

Set the connection endpoint to **A remote VPN client**.

Click on **Next**.

Finish the Wizard

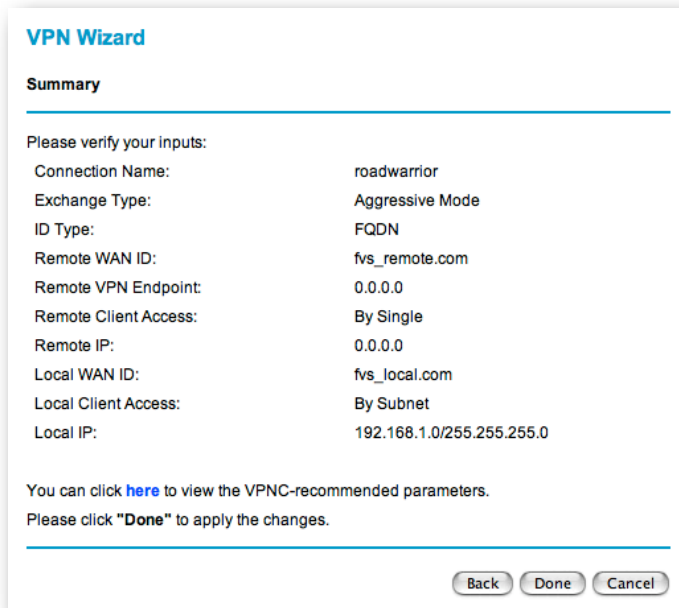

VPN Wizard

Summary

Please verify your inputs:

Connection Name:	roadwarrior
Exchange Type:	Aggressive Mode
ID Type:	FQDN
Remote WAN ID:	fvs_remote.com
Remote VPN Endpoint:	0.0.0.0
Remote Client Access:	By Single
Remote IP:	0.0.0.0
Local WAN ID:	fvs_local.com
Local Client Access:	By Subnet
Local IP:	192.168.1.0/255.255.255.0

You can click [here](#) to view the VPNC-recommended parameters.
Please click "**Done**" to apply the changes.


Check if all of your information is correct. The Local IP should correspond to your local LAN address.

Click on **Done** if all settings are correct.

IPSecuritas Setup

This section describes the necessary steps to setup IPSecuritas to connect to the FVS124G router.

Start Wizard

Unless it is already running, you should start IPSecuritas now. Change to **Connections** menu and select **Edit Connections** (or press **⌘-E**). Start the Wizard by clicking on the following symbol: 

Enter Name of New Connection



Connection Wizard

Welcome to the connection setup wizard, which will help you to configure the most common setups.

Please enter the name of this connection into the field below:

Name:

Enter a name for the connection (any arbitrary name).

Click on the right arrow to continue with the next step.

Select Router Model



Select **Netgear** from the manufacturer list and **FVS124G** from the model list.

Click on the right arrow to continue with the next step.


Enter Router's Public IP Address



Enter the public IP address or hostname of your Netgear FVS124G router. In case your ISP assigned you a dynamic IP address, you should register with a dynamic IP DNS service (like <http://www.dyndns.org>).

Click on the right arrow to continue with the next step.

Enter a Virtual IP Address

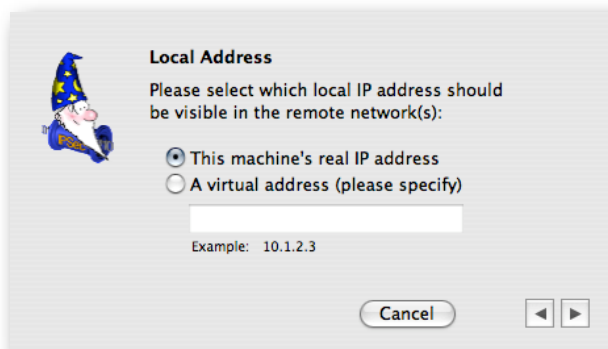


Enter a virtual local IP address. This address appears as the source address of any packet going through the tunnel. If no address is specified, the real local IP address is used instead.

In order to prevent address collisions between the local network and the remote network, it is recommended to use an address from one the ranges reserved for private network (see **RFC 1918**).

next step.

Click on the right arrow to continue with the


Enter Remote Network

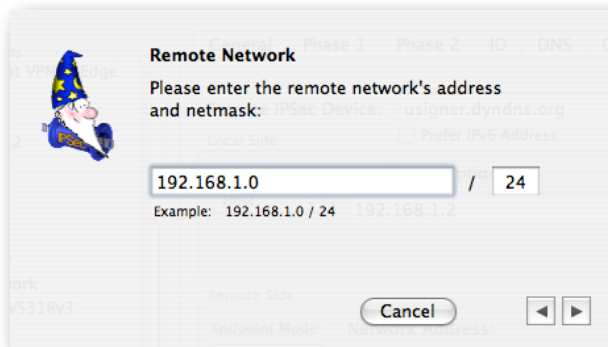

Enter the remote network address and netmask (please note that the netmask needs to be entered in **CIDR** format). This has to match with the settings of the FVS124G.

Click on the right arrow to continue with the next step.


Enter Local Identification

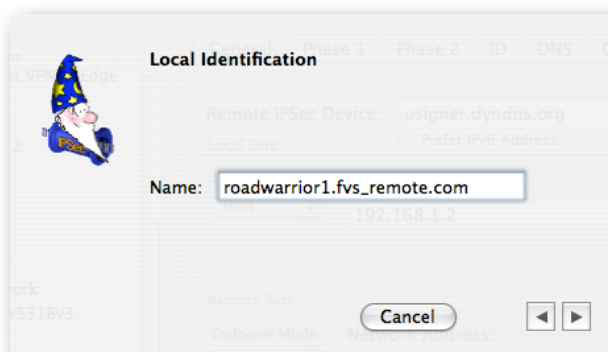

Enter the local identification (which is **roadwarrior1.fvs_remote.com** by default if you used the FVS124G VPN wizard with the connection name **roadwarrior** as described above. Please also see the wizard summary of the 124G).

Click on the right arrow to continue with the next step.


Enter Remote Identification

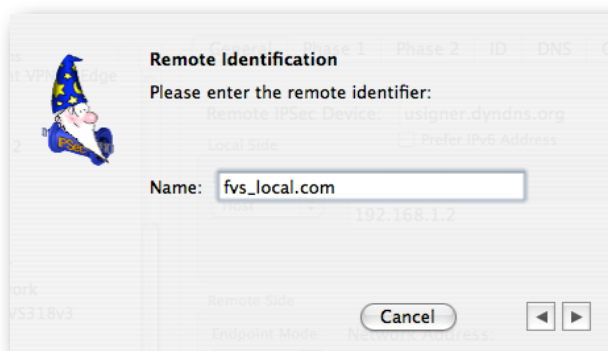

Enter the remote identification (which is **fvs_local.com** by default if you used the FVS124G VPN wizard with the connection name **Roadwarrior** as described above. . Please also see the wizard summary of the 124G).

Click on the right arrow to continue with the next step.

Enter Preshared Key

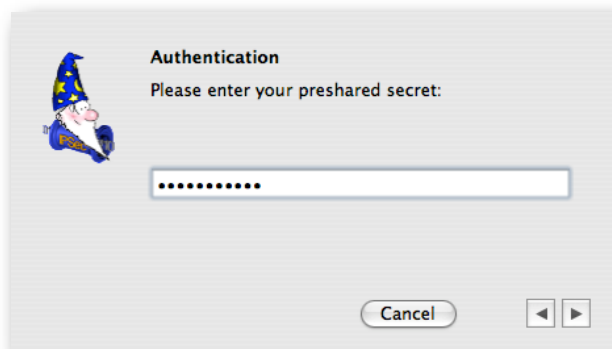

Enter the same **Preshared Key** that you used for the FVS124G.

Click on the right arrow to finish the connection setup.

Diagnosis

Reachability Test

To test reachability of the remote host, open an **Terminal Window** (Utilities -> Terminal) and enter the command **ping**, followed by the FVS124G **local IP address**. If the tunnel works correctly, a similar output is displayed:

```
[MacBook:~] root# ping 192.168.1.1
PING 192.168.215.1 (192.168.1.1): 56 data bytes
64 bytes from 192.168.1.1: icmp_seq=0 ttl=64 time=13.186 ms
64 bytes from 192.168.1.1: icmp_seq=1 ttl=64 time=19.290 ms
64 bytes from 192.168.1.1: icmp_seq=2 ttl=64 time=12.823 ms
```